

Packaged Items:

- (2) TPH panel hooks (right and left).
- (4) Adhesive cord management clips.


Required Additional Items:

Tambient luminaire with mounting slot.


Required Tools:

Small torpedo level.

Application Notes:

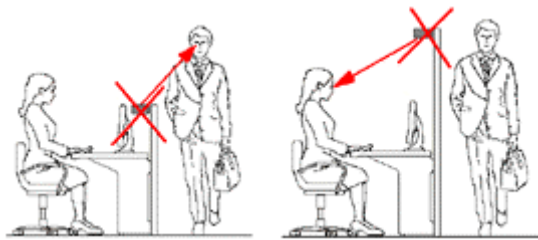


Caution: To avoid glare, do not install task ambient and task only luminaires above 66" A.F.F. (62" for 24" deep worksurfaces). Also, do not install task ambient luminaires below 48" A.F.F.

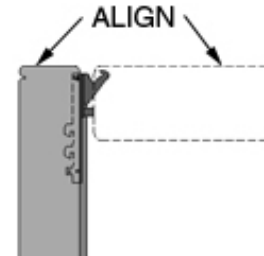

For task ambient luminaires, install hook so top of luminaire aligns with top of panel.

Note: Panels that extend more than 1" beyond the top of the luminaire will restrict the uplight distribution.

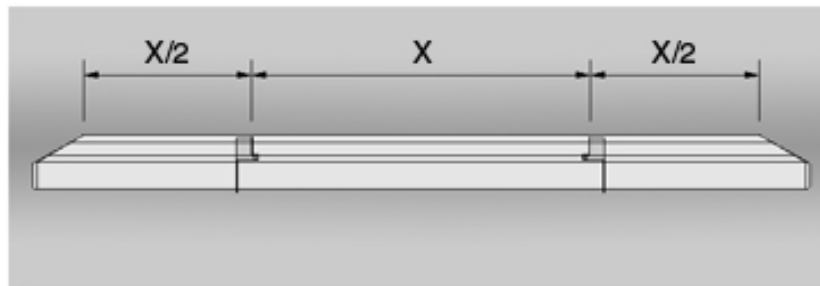

Luminaires can extend beyond the brackets on one end or both ends.

Caution: Do not allow extension to exceed 1/2 times the bracket spacing.

CONFIDENTIAL PROPRIETARY INFORMATION

The information herein is of a proprietary nature and is submitted in confidence for the use by our clients, customers, or vendors only. Unauthorized reproduction, publication, distribution, or dissemination, in whole or in part, is expressly prohibited. The information contained herein is and remains the property of Tambient and receipt or possession of this information confers no right in or license to or disclose to others the subject matter contained herein for any but authorized purposes. All rights reserved. Copyright © 2010 Sylvan R. Shemitz Designs, Inc.

Installation Instructions:

STEP 1




1
Leveling Screw

2

Insert hooks into partition channel and press mounting hook down to lock in place. Verify that the hooks are engaged at the same elevation and that the leveling screw tabs extend toward each other.


Note: Generally for task ambient luminaires, panel hooks must be installed into the highest partition frame slots.

STEP 2

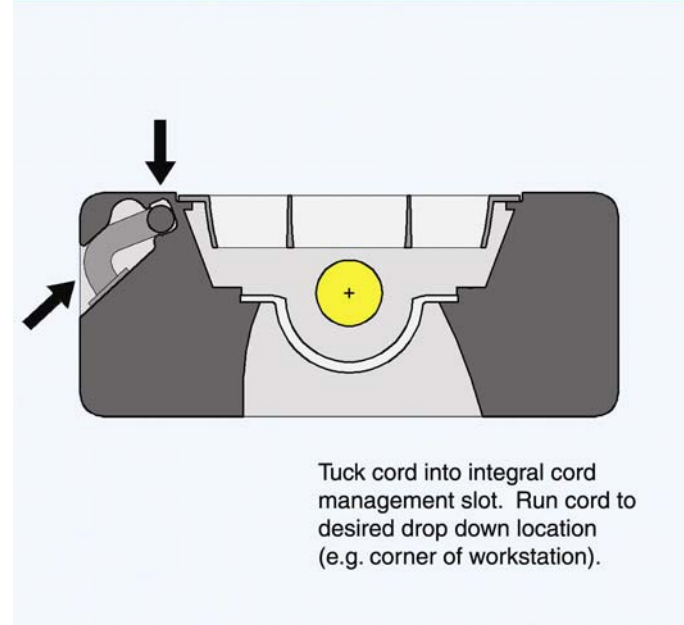

Tuck cord into integral cord management slot. Run cord to desired drop down location (e.g. corner of workstation).

STEP 3

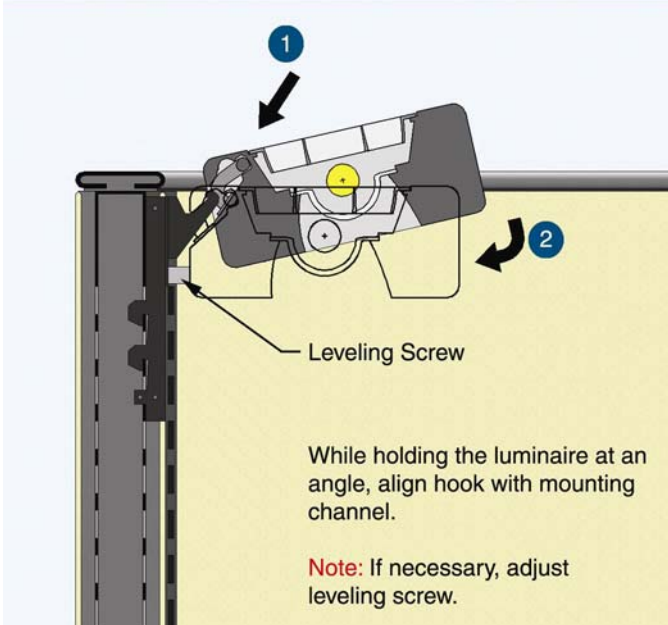

1

2


Leveling Screw

While holding the luminaire at an angle, align hook with mounting channel.

Note: If necessary, adjust leveling screw.

STEP 4

1. Remove protective film from luminaire top (task ambient luminaires only).
2. Remove foam packing inserts from below.

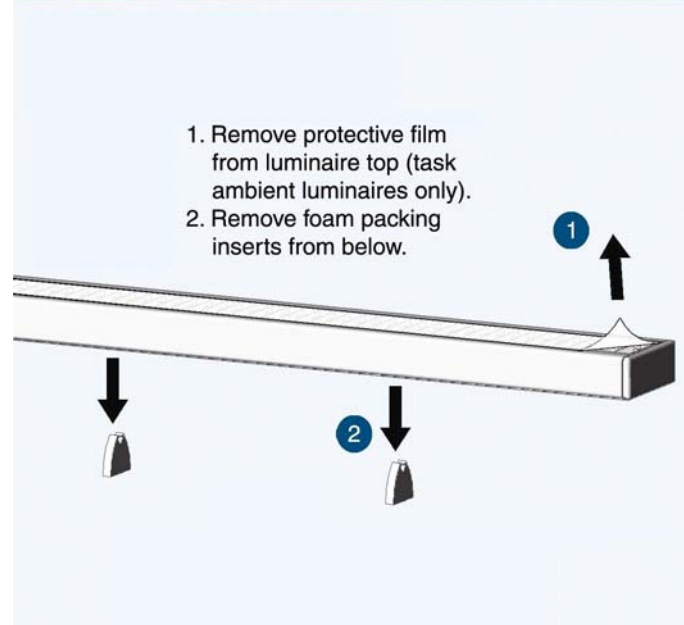

1

2


CONFIDENTIAL PROPRIETARY INFORMATION

The information herein is of a proprietary nature and is submitted in confidence for the use by our clients, customers, or vendors only. Unauthorized reproduction, publication, distribution, or dissemination, in whole or in part, is expressly prohibited. The information contained herein is and remains the property of Tambient and receipt or possession of this information confers no right in or license to or disclose to others the subject matter contained herein for any but authorized purposes. All rights reserved. Copyright © 2010 Sylvan R. Shemitz Designs, Inc.

STEP 5


Note: Consider connecting to a switch or occupancy sensor. Consult a licensed electrician if wiring modifications are required.

Use a grounded 120 volt outlet.

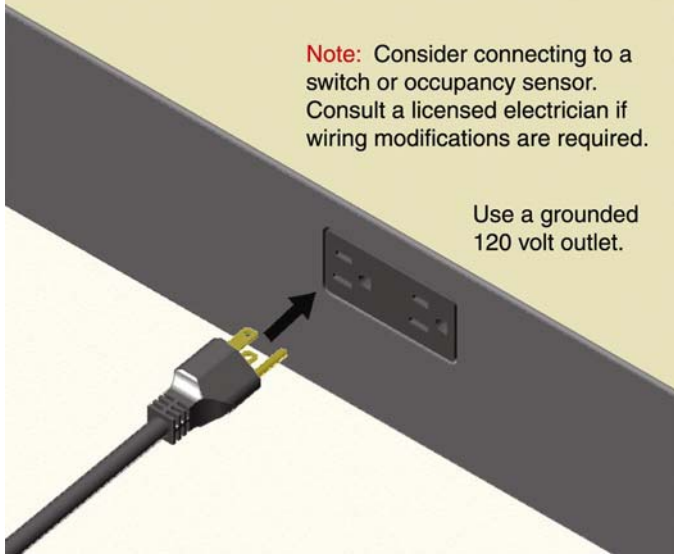

STEP 6

Position lens at task location.

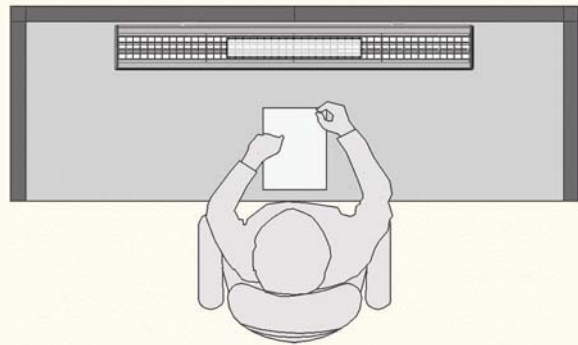

CONFIDENTIAL PROPRIETARY INFORMATION

The information herein is of a proprietary nature and is submitted in confidence for the use by our clients, customers, or vendors only. Unauthorized reproduction, publication, distribution, or dissemination, in whole or in part, is expressly prohibited. The information contained herein is and remains the property of Tambient and receipt or possession of this information confers no right in or license to or disclose to others the subject matter contained herein for any but authorized purposes. All rights reserved. Copyright © 2010 Sylvan R. Shemitz Designs, Inc.